

Tyre Puncture ▶ Removing Wheels

5. Remove the rear axle shaft, washer, brake caliper bracket, rear wheel and side collars.
 - ▶ Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
 - ▶ Avoid getting grease, oil, or dirt on the disc to pad surfaces.
 - ▶ Do not push the brake pedal while the wheel is removed.

Installation

1. To install the rear wheel, reverse the removal procedure.
 - ▶ Take care to prevent the brake caliper from scratching the wheel during installation.

NOTICE

When installing the brake caliper into position, carefully fit the brake disc between the pads to avoid scratching them.

Troubleshooting

continued 95