


Headlight Bulb

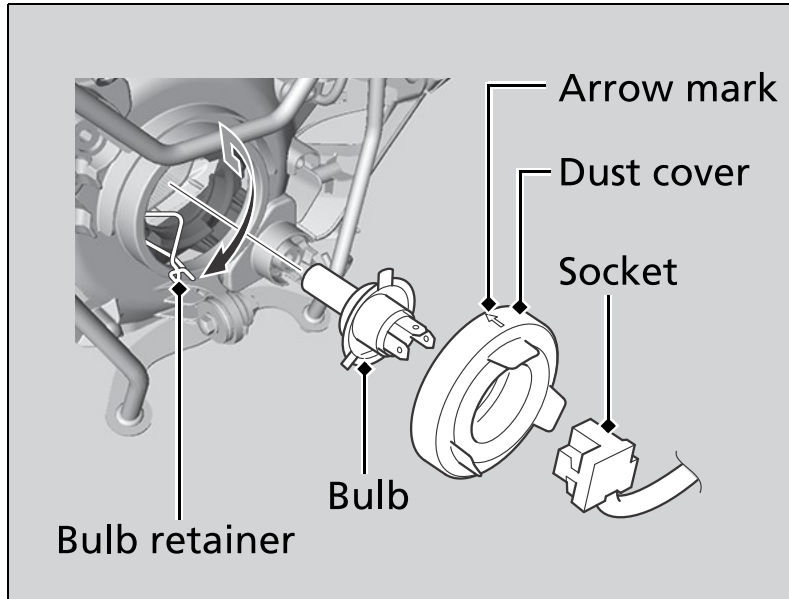

1. Remove the headlight assembly. ► P. 59
2. Pull off the socket without turning.
3. Remove the dust cover.
4. Unhook the bulb retainer by pushing and lifting it, and pull out the bulb without turning it.
5. Install a new bulb and parts in the reverse order of removal.
 - Install the dust cover with its arrow mark facing up.

Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol.