
Position Light
Position light use some LED.
If there is a LED which is not turned on, see your Honda dealer for this service.

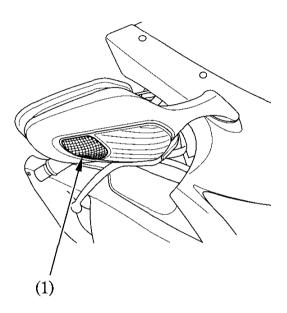

(1) Position light