


## Instruments (Continued)

### 4 HISS indicator setting:

You can select the blink or off the HISS indicator.

- 1 Press SEL button to select "On" (blinks) or "OFF" (off).

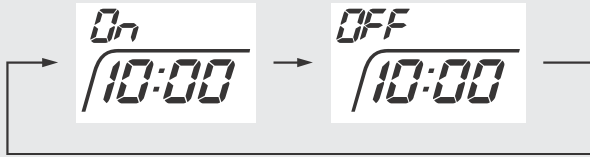

- 2 **Except E, II E type**

Press SET button. The HISS indicator setting is set, and then the display moves to the changing of the fuel mileage meter unit.

#### **E, II E type only**

Press SET button. The HISS indicator setting is set, and then the display moves to the changing of the speed and mileage unit.

### 5 Changing the speed and mileage unit:

#### **E, II E type only**

- 1 Press SEL button to select either "km/h" and "km" or "mph" and "mile."
- 2 Press SET button. The speed and mileage unit is set, and then the display moves to the changing of the fuel mileage meter unit.

