

Speedometer/Odometer/Tripmeter/ Speed and Mileage Unit Change

Speedometer

Shows riding speed.

Odometer


Shows accumulated mileage.

Tripmeter

Shows mileage per trip.

There are two tripmeters, tripmeter A (4) and tripmeter B (5). Switch between the A and B displays by pressing the select button (6) repeatedly.

To reset the tripmeter, push and hold the reset button (7) with the display in the tripmeter A or tripmeter B mode.

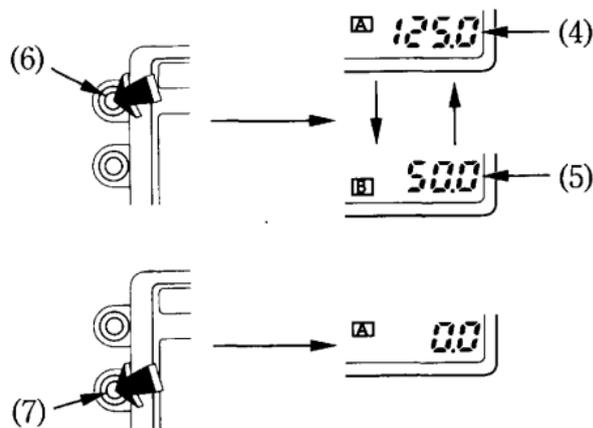

- (1) Speedometer
- (2) Odometer
- (3) Tripmeter

- (4) Tripmeter A
- (5) Tripmeter B
- (6) Select button
- (7) Reset button