


Removing & Installing Body Components

Seat

Maintenance

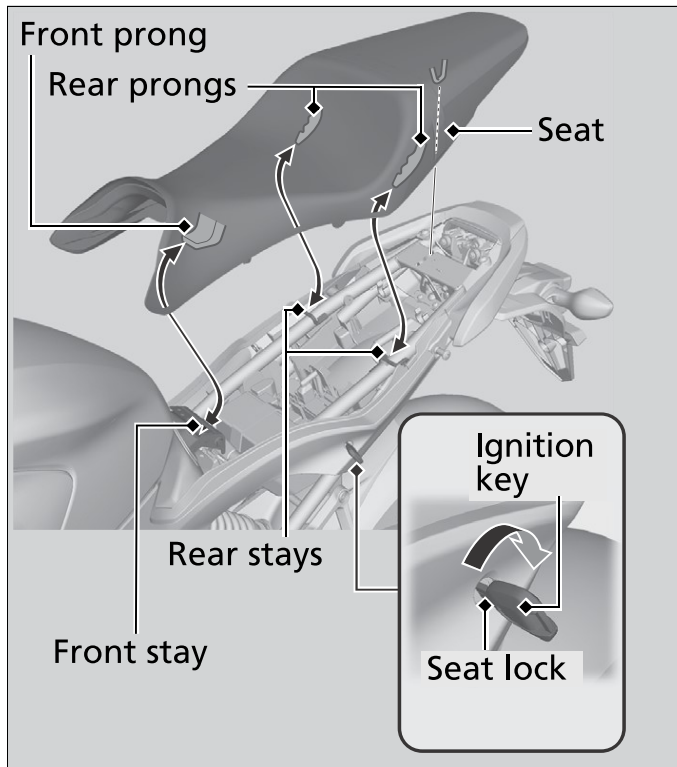

Removal

1. Insert the ignition key into the seat lock, and turn and hold the key clockwise to unlock the seat.
2. Pull the rear of the seat back and up.

Installation

1. Insert the front prong into the front stay on the frame.
 2. Insert the rear prongs into the rear stays on the frame.
 3. Push forward and down on the rear of the seat until it locks in place.
Make sure that the seat is locked securely in position to pull it up lightly.
- The seat locks automatically when closed. Take care not to lock your key in the compartment under the seat.