

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER READING (NOTE 1)										Refer to page			
			→		x1,000km		x1,000mi									
			1	6	12	18	24	30	36	0.6	4	8		12	16	20
NOTE	MONTHS	6	12	18	24	30	36									
FINAL DRIVE OIL															R	85
BATTERY																96-97
BRAKE FLUID		NOTE 4					R			R						21-22
BRAKE PAD WEAR																95
BRAKE SYSTEM																21-22, 95
* BRAKE LIGHT SWITCH																—
* HEADLIGHT AIM																48
CLUTCH SYSTEM																—
CLUTCH FLUID		NOTE 4					R			R						23
* REVERSE OPERATION																—
SIDE STAND																87
* SUSPENSION																—
* CRUISE VALVE ELEMENT														R		—
* AIR PUMP ELEMENT										C						—
* AIR DRIER																—
* NUTS, BOLTS, FASTENERS																—
** WHEELS/TIRES																—
** STEERING HEAD BEARINGS																—

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

NOTES: 1. At higher odometer readings, repeat at the frequency interval established here.

2. Service more frequently when riding in unusually wet or dusty areas.

3. Service more frequently when riding in rain, or at full throttle.

4. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.

5. Switzerland type only.