

# MAINTENANCE

## FRONT WHEEL REMOVAL

(Refer to the maintenance precautions on page 61.)

For related torque specifications, see page 91. The numbers are shown in sequence of disassembly.

