



Shifting the Transmission

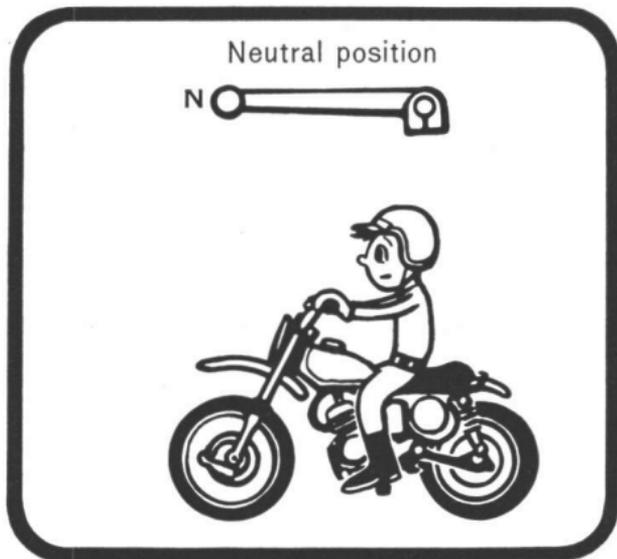

The neutral position is used for starting the engine or for other circumstances when engine power is not to be transmitted to the rear wheel.

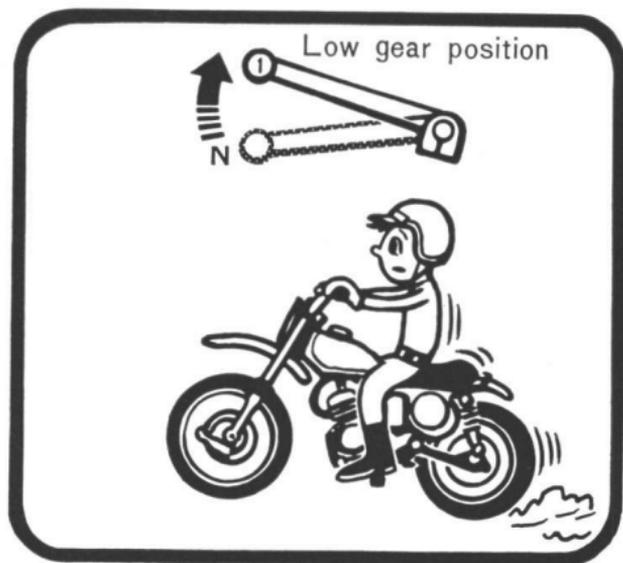

Low gear is used when starting and when going up a steep grade, and for riding at low speeds over rough terrain.