



Close the throttle.



Pull in the clutch lever.