


3. If the drive chain is found to require adjustment, the procedure is as follows:
- Remove the rear axle nut cotter pin ② and loosen the rear axle nut ③.
  - Turn the adjusting nut ④ to increase or decrease chain tension. Align the chain adjuster index marks ⑤ with the reference marks ⑥ on both sides of the rear fork.


- Tighten the rear axle nut and secure the nut with a new cotter pin.
- Check rear brake adjustment.

**CAUTION:**

**Check alignment of the chain protector ⑦. If the chain protector should become bent, it may rub against the drive chain and cause rapid wear.**

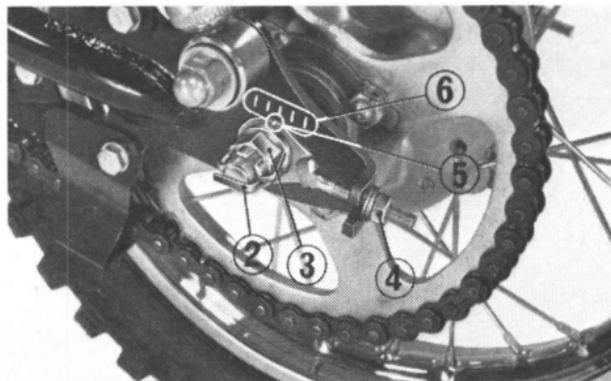

- ② Cotter pin  
③ Rear axle nut  
④ Adjusting nut  
⑤ Index mark  
⑥ Reference marks

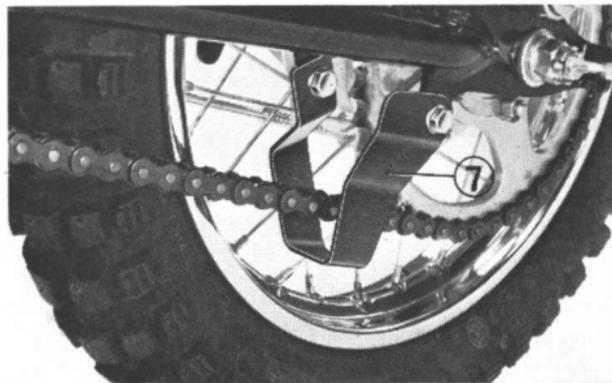

- ⑦ Chain protector