


whenever the drive chain is reassembled.

6. Adjust the drive chain to the proper tension, following the instructions on pages 47~48.

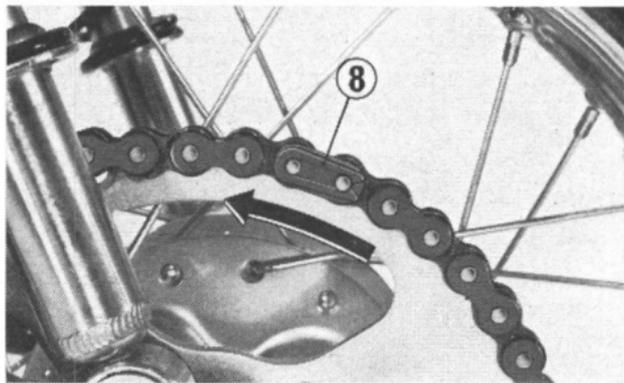

⑧ Retaining clip


Wheel Inspection

Check the wheels for bent rims and loose spokes and, if necessary, consult your HONDA dealer for repair.

Check the tires for general condition.

Front wheel removal

1. Place a support stand under the engine to raise the front wheel off the ground.
2. Turn the front brake adjuster ① all the way in direction A and disconnect the brake cable end ② from the brake arm ③.
3. Pull the cotter pin ④ out of the axle nut ⑤.
4. Remove the axle nut and pull out the front axle ⑥. The front wheel can now

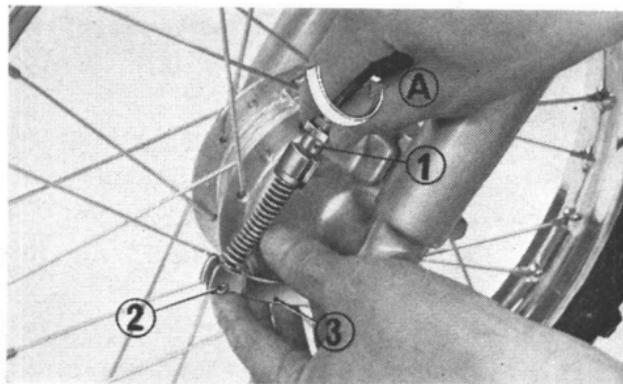

- ① Front brake adjuster
- ② Front brake cable end
- ③ Brake arm