


Cylinder Head, Cylinder and Piston:

1. Remove the seat and remove the fuel tank.
2. Remove the spark plug and cylinder head nuts and remove the cylinder head.
3. Decarbonize the combustion chamber walls and piston crown using a scraper of soft material.

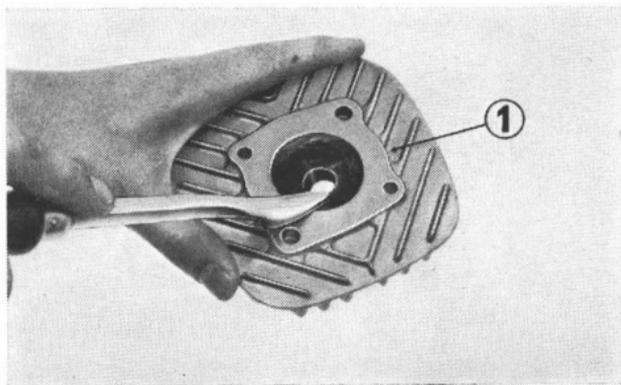


① Cylinder head

Take care not to score or scratch the surfaces. Ensure that debris does not enter ports when working on the piston.

4. To assemble, reverse the disassembly procedure.

NOTE: Use a new gasket when reassembling the cylinder head.

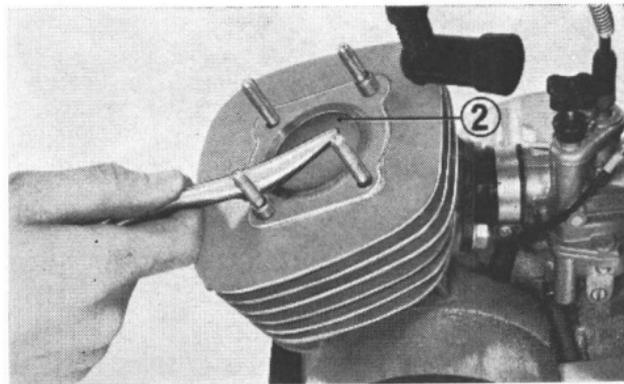

② Piston