
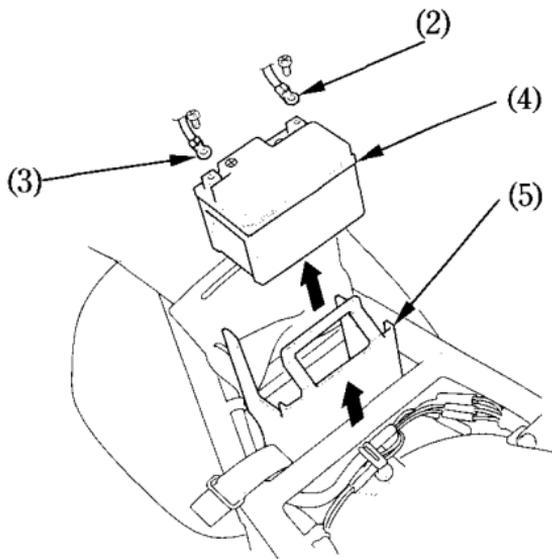


### Battery Removal:

1. Remove the seat (page 33).
2. Release the ring (1).
3. Disconnect the negative (-) terminal lead (2) from the battery first.
4. Disconnect the positive (+) terminal lead (3).
5. Lift up the battery box (5) then pull out the battery (4).

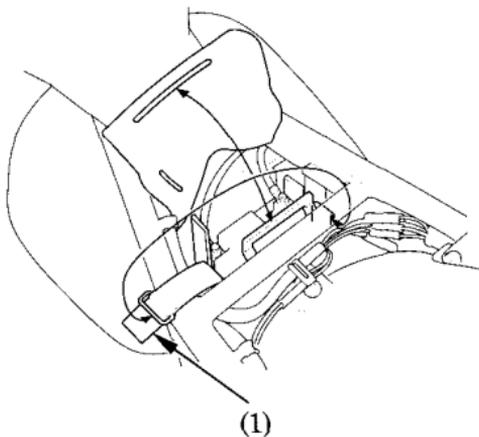

- (1) Ring
- (2) Negative (-) terminal lead
- (3) Positive (+) terminal lead
- (4) Battery
- (5) Battery box