

4. Add air to the recommended pressure.
 5. Apply the front brake and push down on the handlebars several times. Release the brake and recheck front fork air pressure. Release air if necessary to obtain the recommended pressure.
- NOTE: Do not exceed recommended air pressure or the ride will be harsh and uncomfortable.**
6. Reinstall the front fork air valve caps.