

FREQUENCY ITEM		EVERY	BREAK-IN MAINT.	REGULAR MAINT. INTERVAL	Refer to
			200 mi 350 km	1000 mi 1600 km	
	DRIVE CHAIN	NOTE 1	I, L	EVERY 500 km (800 mi.) I, L	108
	BRAKE SHOE WEAR			I	126
	BRAKE SYSTEM		I	I	118
*	HEADLIGHT AIM			I	—
	CLUTCH SYSTEM		I	I	104
	SIDE STAND			I	—
*	SUSPENSION			I	
*	NUT, BOLT, FASTENER		I	I	—
**	WHEEL		I	I	—
**	STEERING HEAD BEARING		I	I	—

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

NOTE 1: Service more frequently when ridden in wet or dusty conditions.