


SKID AND GUARD PLATES

Skid plate (1) and guard plate (2) protect the engine and rear axle from rocks. Check the plates for cracks, damage or looseness at intervals shown in the Maintenance Schedule (page 38).

Replace the plates with new ones if they are cracked or damaged.

If the plate bolts are loose, tighten them securely.

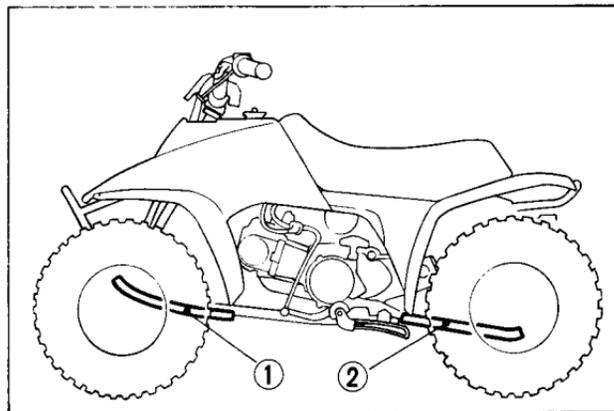

(1) Skid plate

(2) Guard plate