


INNER COWL

Removal:

1. Remove the front cowl (page 64).
2. Remove the clips (1).
3. Remove the inner cowl (2).

Installation:

- Installation can be done in the reverse order of removal.

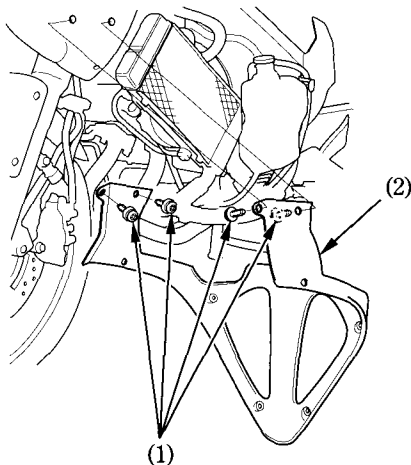

- (1) Clips
(2) Inner cowl