


FUSE REPLACEMENT

(Refer to maintenance precautions on page 55).
The main fuse (1), located near the battery, is 30 A.

The spare main fuse (2) is located in the fuse box (2).


The fuse box (2) is located behind the battery.
Its fuses are 10 A.

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

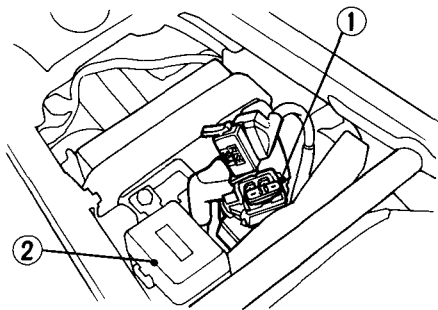

CAUTION:

- * Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.

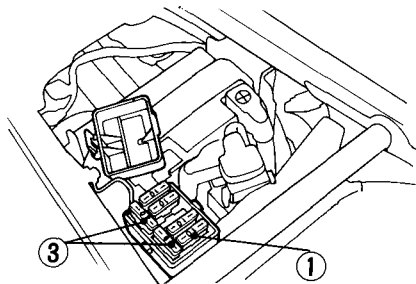

- (1) Main fuse
(2) Fuse box

- (3) Spare fuse