



1. To drain the oil, remove the oil filler cap/
dipstick and oil drain plug (1) and sealing
washer (2).

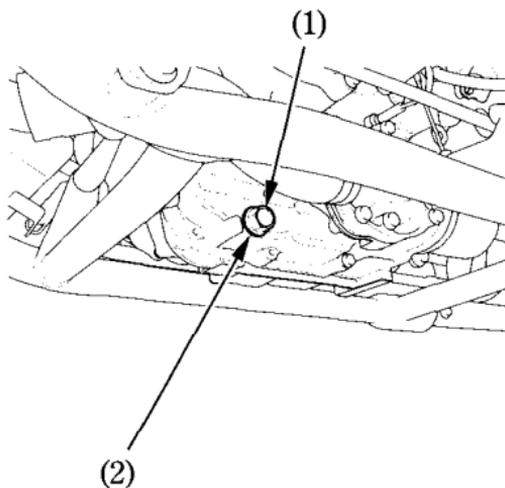

(1) Oil drain plug
(2) Sealing washer

2. Remove the oil filter (3) with a filter
wrench and let the remaining oil drain out.
Discard the oil filter.

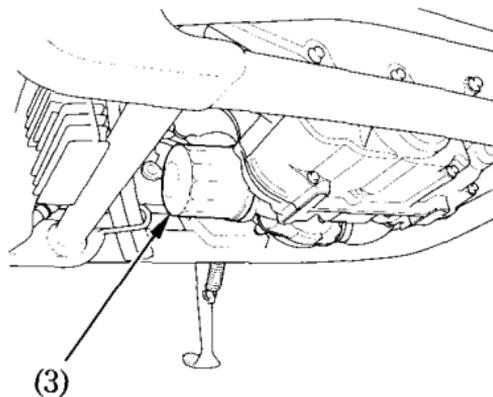

(3) Oil filter