


### Main fuse:

The main fuse (1) is located behind the right side cover. The specified fuse is:

**30A**

1. Remove the right side cover (page 34).
2. Disconnect the wire connector (2) of the stater magnetic switch (3).

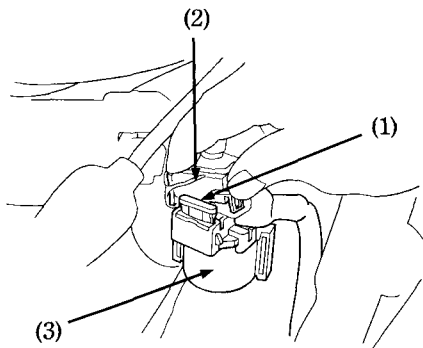


- (1) Main fuse      (3) Starter magnetic switch  
(2) Wire connector

3. Pull out the fuse. If the fuse is blown install a new fuse.

The spare main fuse (3) is located near the fuse box (5).

4. Reconnect the wire connector and install the right side cover.

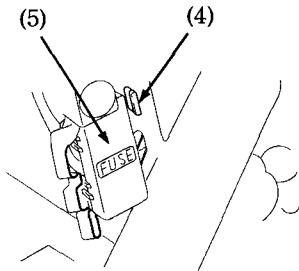

- (4) Spare main fuse      (5) Fuse box