

If the engine does not start:**Using the start button**

- ① Open the throttle fully and press the start button for 5 seconds.
- ② Repeat the normal starting procedure.
- ③ If the engine starts, open the throttle slightly if idling is unstable.
- ④ If the engine does not start, wait 10 seconds before trying steps ① & ② again.

Using the kickstarter

- ① Turn off the ignition switch.
- ② Open the throttle fully.
- ③ Crank the engine several times with the kickstarter.
- ④ Repeat the normal starting procedure.
- ⑤ If the engine starts with unstable idle, open the throttle slightly.

If Engine Will Not Start ➡ P.79