


## Inspecting the Rear Brake Lever Freeplay

1. Place the scooter on its centre stand.
2. Measure the distance of the rear brake lever before the starts to take hold.

**Freeplay at the tip of the brake lever:**

10 to 20 mm (0.4 to 0.8 in)

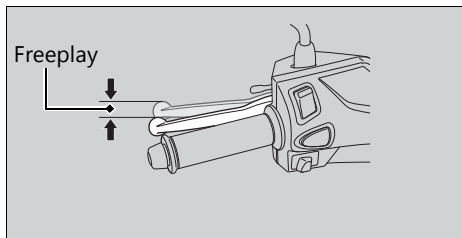

Check the brake cable for kinks or signs of wear. If necessary have it replaced by your dealer.

Lubricate the brake cable with a commercially available cable lubricant to prevent premature wear and corrosion. Make sure the brake arm, spring and fastener are in good condition.