

Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence.
➤ P. 26
- Check that there is petrol in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence.
➤ P. 26
 - Check for a blown fuse. ➤ P. 90
 - Check for a loose battery connection or battery terminal corrosion. ➤ P. 47
 - Check the condition of the battery. ➤ P. 83
- If the problem continues, have your scooter inspected by your dealer.