


## Position Light Bulb

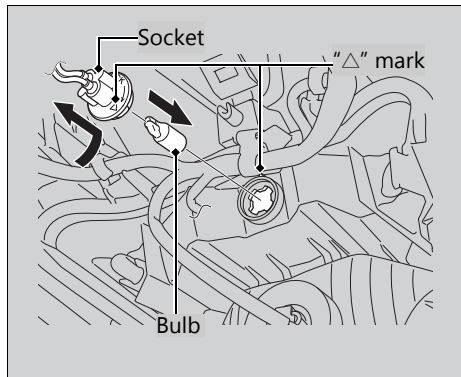

1. Remove the front top cover. ► P. 60
2. Remove the front cover. ► P. 59
3. Turn the socket counterclockwise and pull it out.
4. Pull out the bulb without turning it.
5. Install a new bulb and parts in the reverse order of removal.
  - Make sure that the "Δ" marks on the socket and position light housing are aligned.