


Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 48

Fuse Box Fuses

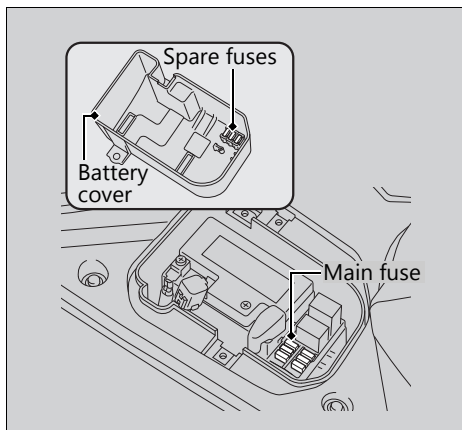

1. Remove the battery lid and the battery cover from the step floor. ► P. 56
2. Pull out the fuses one by one to check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
► Spare fuses are provided on back side of the battery cover.
3. Install the parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your scooter inspected by your dealer.