


PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned **I** (On).

If it comes on while engine is running:  **P.96**

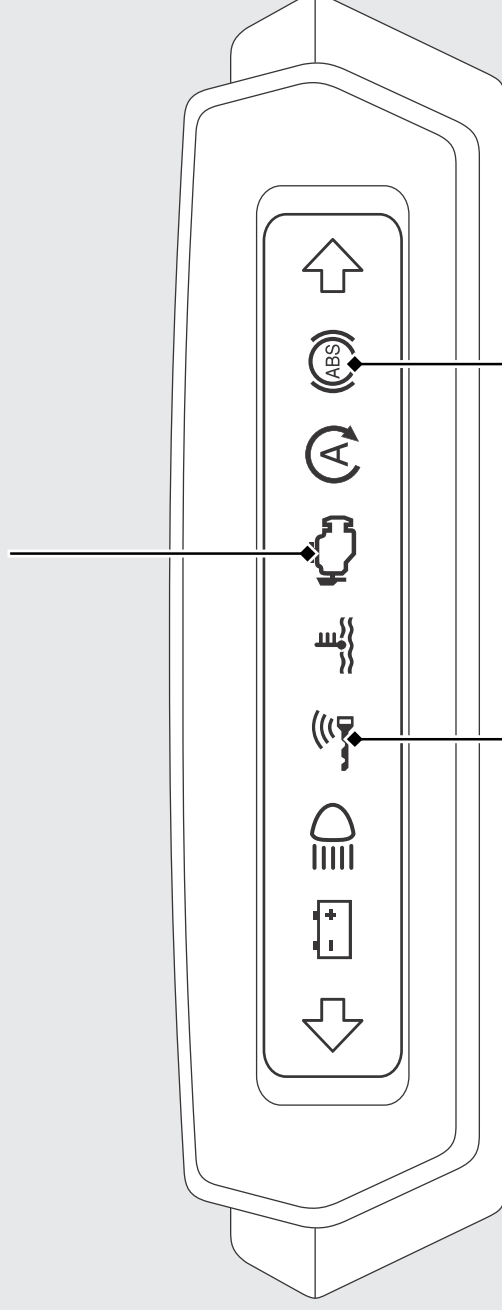

Honda SMART Key Indicator

Comes on when vehicle and Honda SMART Key verification is complete, and the ignition switch can be operated.

Goes off when the ignition switch is turned **I** (On).

When the Honda SMART Key Indicator

Flashes:  **P.98**

ABS (Anti-lock Brake System) indicator

Comes on when the ignition switch is turned to the **I** (On) position. Goes off when your speed reaches approximately 10 km/h (6 mph).

If it comes on while riding:  **P.97**