


FUEL SYSTEM

Check the throttle valve and jet needle for wear or damage.

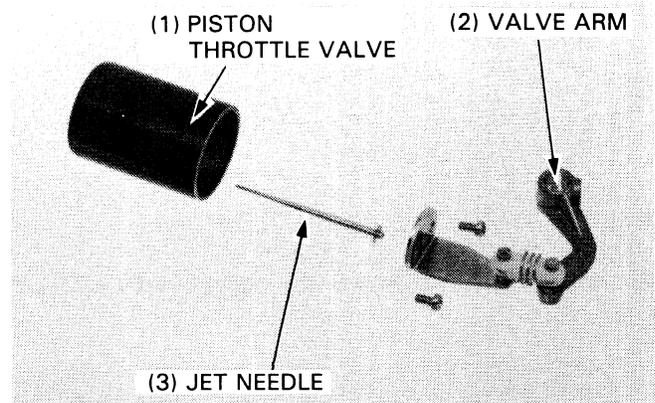


PISTON THROTTLE VALVE INSTALLATION

Install the needle clip on the jet needle.

STANDARD SETTING: 3rd groove


Install the piston throttle valve in the reverse order of removal.

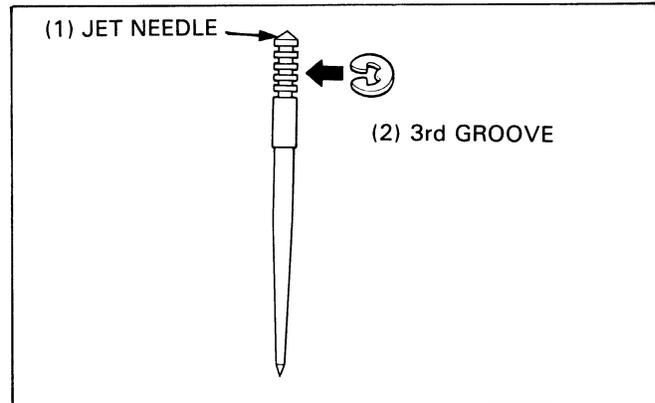

THROTTLE VALVE SYNCHRONIZATION

Close the butterfly throttle valve fully.

Make sure that the piston throttle valve is closed fully and there is no clearance between the throttle link and the piston throttle valve shaft arm.

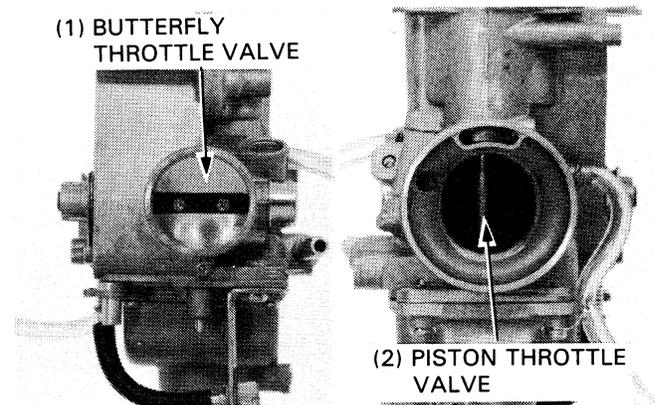

Adjust synchronization by opening or closing the slot in the throttle link.

