



RIGHT CRANKCASE COVER REMOVAL

Drain the engine oil (page 2-2).
 Disconnect the clutch cable from the clutch arm.
 Remove the oil bolt with the two sealing washers.

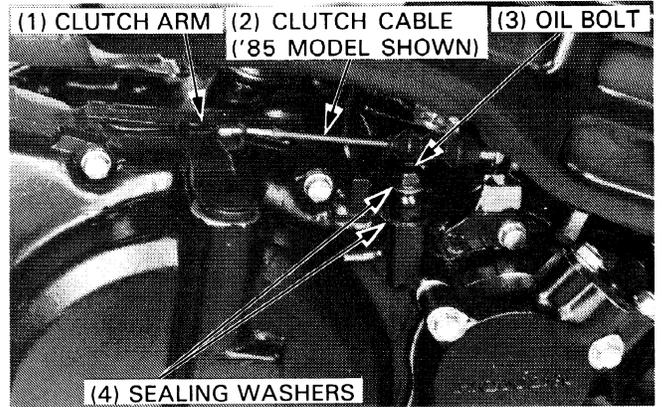


Remove the oil cooler pipe bolts and disconnect the pipes from the right crankcase cover.

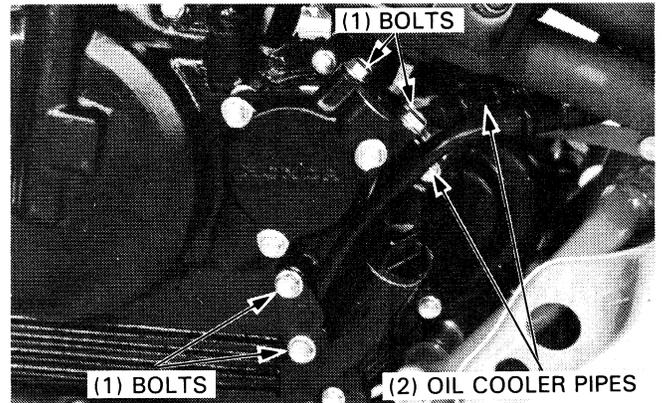

Remove the decompressor cable holder bolt and disconnect the cable from the cam follower shaft arm.

Remove the kick starter arm pinch bolt and the arm.

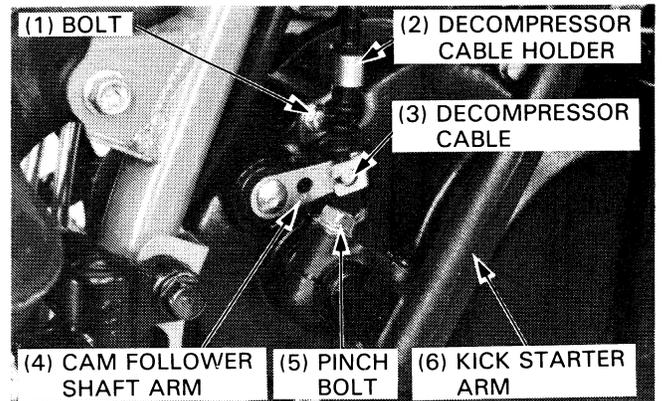

Remove the right crankcase cover bolts and the cover.

