


Align the punch marks and install the ratchet over the shaft.

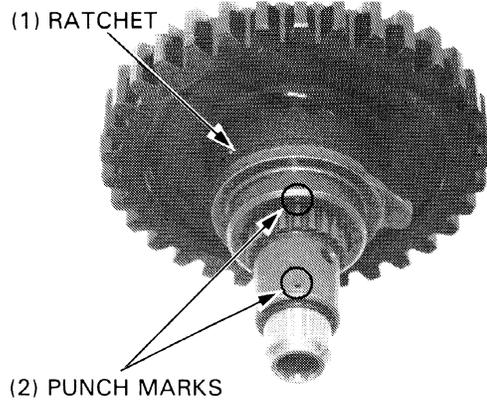


Install the ratchet spring and spring seat.

Install the return spring and insert its end into the hole in the shaft.

Install the collar, aligning its groove with the end of the return spring.


Install the thrust washer.

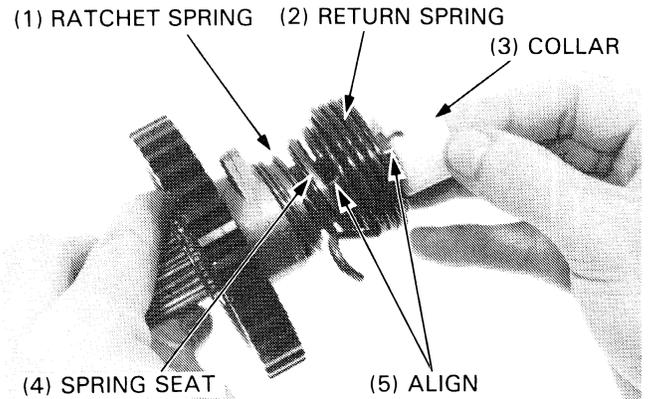

Install the spring seat and cam spring over the shaft.

Align the punch marks and install the decompressor cam.

Install the thrust washer.

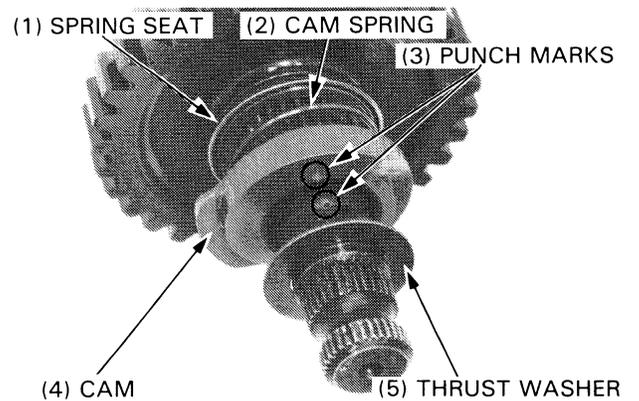

INSTALLATION

Temporarily install the kick starter arm onto the shaft.

Align the return spring hook with the crankcase boss under the ratchet guide.

