

TROUBLESHOOTING

Wheel wobble or vibration in vehicle

- Bent rim.
- Loose wheel bearings.
- Faulty axle bearing holder.
- Faulty tire.
- Loose axle.
- Worn or damaged swing arm pivot bearings.