


## REAR SUSPENSION

### SWING ARM

#### REMOVAL


Remove the following:

- rear wheels and axle (page 12-3)
- rear wheel bearing holder (page 12-9)
- shock bracket mount bolts.

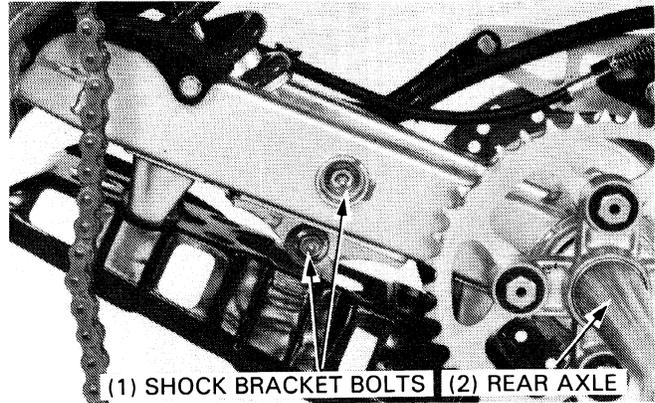


Remove the:

- brake torque link mount nut and lock washer ('85 only).
- brake hose and parking brake cable clamp bolt
- swing arm pivot nut, bolt and swing arm.

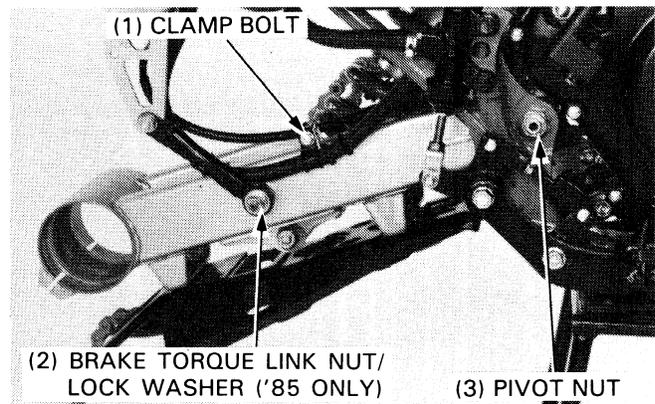

Remove the:

- swing arm lower guard bolts and guard
- chain slider bolts and slider
- dust seal caps, dust seals, washers and pivot collar.

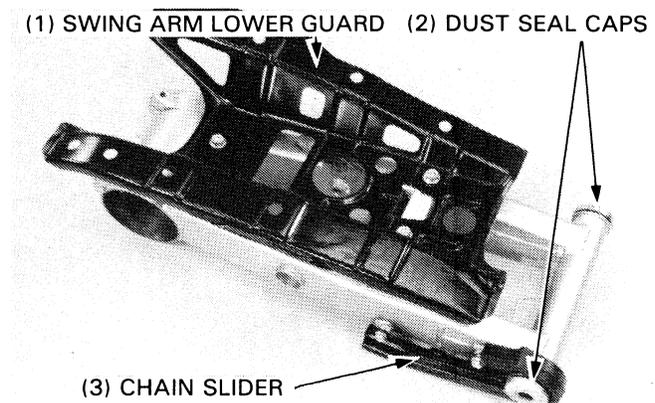

#### INSPECTION

Check the swing arm for damage and replace if necessary.

Check the swing arm pivot needle bearings, collars, and dust seals for wear or damage.

