



IGNITION SYSTEM

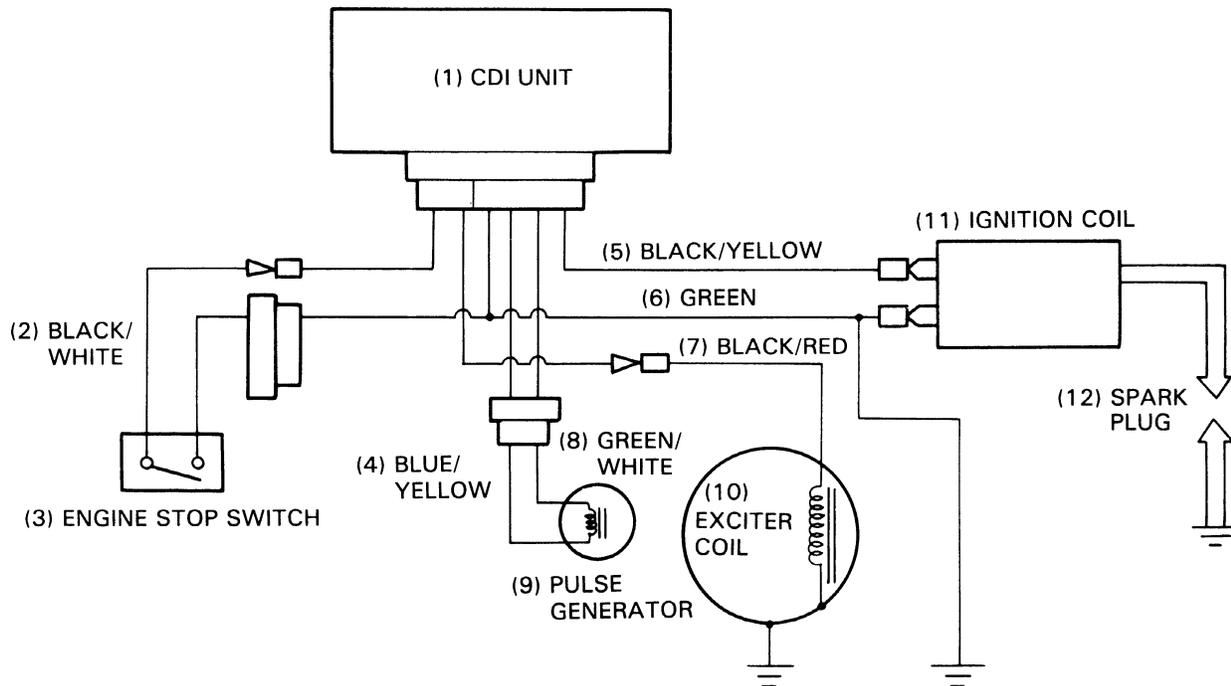

IGNITION COIL

Remove the spark plug cap.

Disconnect the primary and ground wires from the ignition coil. Remove the ignition coil.

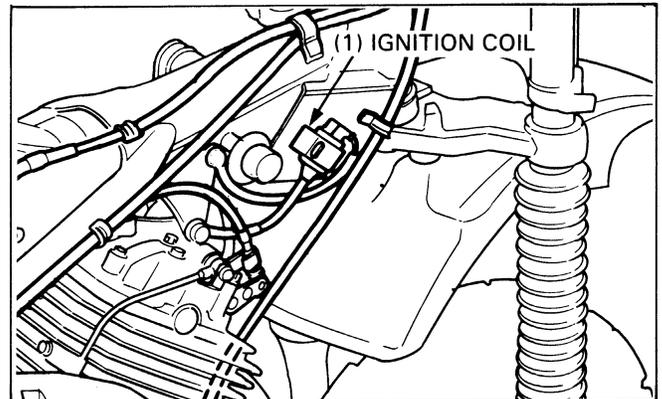

Measure the primary coil resistance between the primary and ground terminals.

PRIMARY COIL RESISTANCE: 0.16—0.2 Ω

