


Instruments (Continued)

1 Shift up rev setting

You can adjust the shift up point.

- 1 Turn the ignition switch to the ON position.
- 2 Select the LINE mode. **→ P.32**
 - ▶ The tachometer bar and RPM value (x 100) in INFO 2 display start flashing, and the message of "SHIFT REV" scrolls in INFO 1 display.

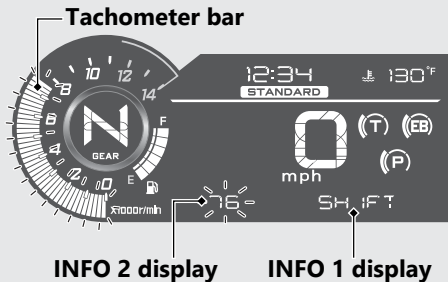

- 3 Each time the **SEL** **▲** (up) button or the **SEL** **▼** (down) button is pressed, tachometer bar and RPM value in INFO 2 display increase or decrease by 200 r/min (rpm) (one segment). When the set value exceeds the allowable range, the set value automatically returns to 5,000 r/min (rpm) or 11,400 r/min (rpm).
 - ▶ Press and hold the **SEL** **▲** (up) button or the **SEL** **▼** (down) button to advance the RPM fast.
 - ▶ Available setting range: 5,000 to 11,400 r/min (rpm)
- 4 Press the **MODE** button. The shift up rev is set, and then the display moves to the shift width setting.