




# Switches

## Headlight dimmer switch/Passing light control switch

-  : High beam
-  : Low beam
-  **PASS** : Flashes the high beam headlight.

## Torque Control switch

Torque Control level setting and Torque Control on/off.

 **P.57**

## Hazard switch

Switchable when the ignition switch is on.

## Horn button

## Turn signal switch

▶ Pressing the switch turns the turn signal off.

