

Items		Frequency *1								Regular Replace	Refer to page	
		× 1,000 mi	0.6	4	8	12	16	20	24			
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4			
Emission-Related Items	Fuel Line	🔧			I		I		I		-	
	Throttle Operation	🔧			I		I		I		112	
	Air Cleaner *2					R			R		92	
	Crankcase Breather *3			C	C	C	C	C	C		113	
	Spark Plug		Every 16,000 mi (25,600 km): I, Every 32,000 mi (51,200 km): R									-
	Valve Clearance	🔧							I		-	
	Engine Oil			R		R		R		R	1 Year	96
	Engine Oil Filter			R				R				98
	Engine Idle Speed	🔧				I		I		I		-
	Radiator Coolant *5					I		I		I	3 Years	100
	Cooling System	🔧				I		I		I		-
	Secondary Air Supply System	🔧						I				-
Evaporative Emission Control System *4	🔧						I				-	

Maintenance Level

- 🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (▶ P. 158).
- 🔧 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R : Replace
- L : Lubricate
- C : Clean