

Troubleshooting

Engine Will Not Start	P. 122
Overheating (High coolant temperature indicator is on)	P. 123
Warning Indicators On or Flashing	P. 124
Low Oil Pressure Indicator	P. 124
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 124
ABS (Anti-lock Brake System) Indicator	P. 125
Torque Control Indicator.....	P. 126
Other Warning Indications	P. 127
Fuel Gauge Failure Indication.....	P. 127
Tire Puncture	P. 128
Electrical Trouble	P. 135
Battery Goes Dead.....	P. 135

Burned-out Light Bulb	P. 135
Blown Fuse.....	P. 138