


## I Main Fuse & ABS Fuse

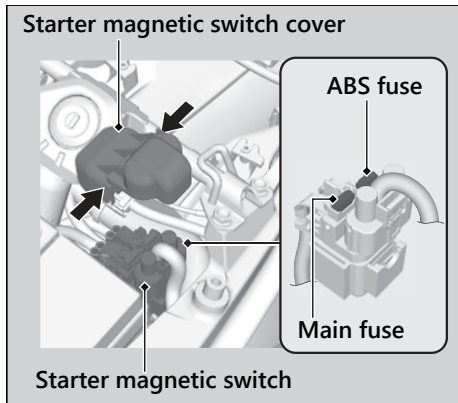

1. Remove the front seat. ► P. 94
2. Disconnect the negative  $\ominus$  terminal from the battery. ► P. 93
3. Remove the starter magnetic switch cover.
4. Pull the main fuse and ABS fuse out one by one and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
  - Spare fuse (30 A) is provided in the fuse case nearby the fuse box. ► P. 138
5. Reinstall parts in the reverse order of removal.

### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.