


## Battery

### Removal

Make sure the ignition switch is in the OFF position.

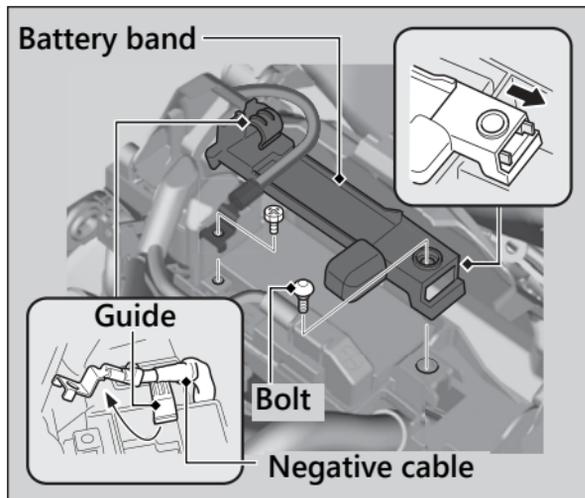

1. Raise the front of the fuel tank. ▣ P. 79
2. Disconnect the negative  $\ominus$  terminal from the battery.
3. Remove the negative  $\ominus$  cable from the guide.
4. Remove the bolt.
5. Slide the battery band and remove it.