


Front Seat

Removal

1. Remove the rear seat. ► P. 81
2. Remove the mounting bolts and collars, and then pull the front seat back and up.

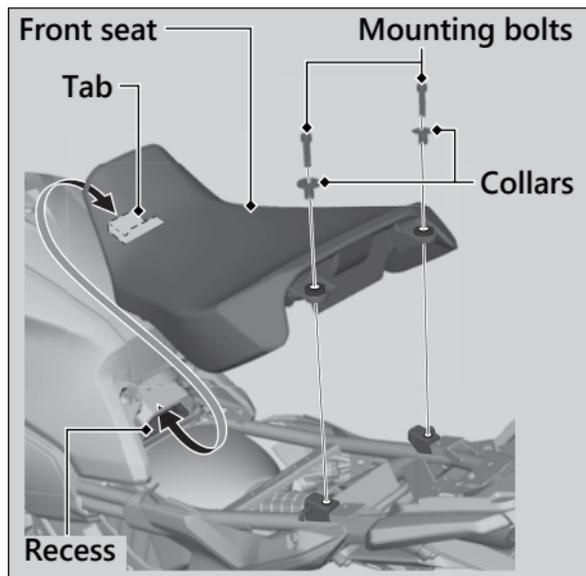

Installation

1. Insert the tab into the recess.
2. Install the collars and mounting bolts.
3. Tighten the mounting bolts securely.

Torque: 7 lbf·ft (10 N·m, 1.0 kgf·m)

- Make sure that the seat is locked securely in position by pulling it up lightly.
4. Install the rear seat. ► P. 81