

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 89	<b>Other Warning Indication</b> .....	P. 93
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 90	Fuel Gauge Failure Indication .....	P. 93
<b>Warning Indicators On or Flashing</b> .....	P. 91	<b>Tire Puncture</b> .....	P. 94
Low Oil Pressure Indicator .....	P. 91	<b>Electrical Trouble</b> .....	P. 101
PGM-FI (Programmed Fuel Injection)		Battery Goes Dead .....	P. 101
Malfunction Indicator Lamp (MIL) .....	P. 91	Burned-out Light Bulb .....	P. 101
ABS (Anti-lock Brake System) Indicator .....	P. 92	Blown Fuse .....	P. 104