







Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence  P. 34
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
 - ▶ If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Make sure the engine stop switch is in  (Run) position  P. 32
- Make sure the side stand is raised.
- Check for a blown fuse  P. 104
- Check for a loose battery connection or battery terminal corrosion  P. 49, 59
- Check the condition of the battery  P. 101

If the problem continues, have your motorcycle inspected by your dealer.