



Maintenance Schedule

Items		Frequency *1								Regular Replace	Refer to page
		× 1,000 mi	0.6	4	8	12	16	20	24		
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Emission-Related Items	Fuel Line				I		I		I		–
	Throttle Operation				I		I		I		83
	Air Cleaner *2						R		R		69
	Crankcase Breather *3			C	C	C	C	C	C		84
	Spark Plug						R				–
	Valve Clearance						I				–
	Engine Oil		R		R		R		R	1 Year	67
	Engine Oil Filter		R				R				67
	Engine Idle Speed				I		I		I		–
	Radiator Coolant *5				I		I		I	3 Years	70
	Cooling System				I		I		I		–
	Secondary Air Supply System						I				–
	Evaporative Emission Control System *4						I				–

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 123).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R** : Replace
- L** : Lubricate
- C** : Clean