



7. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
8. Install the new oil filter and tighten.

**Torque:** 19 lbf-ft (26 N·m, 2.7 kgf·m)

9. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

**Torque:** 22 lbf-ft (30 N·m, 3.1 kgf·m)

10. Fill the crankcase with the recommended oil (► P. 52, ► P. 130) and install the oil fill cap.

#### **Required oil**

##### **When changing oil & engine oil filter:**

2.9 US qt (2.7 L)

##### **When changing oil only:**

2.6 US qt (2.5 L)

11. Check the oil level. ► P. 65
12. Check that there are no oil leaks.