

Changing Air Cleaner Element

Use a new Honda Genuine air cleaner element or an equivalent specified for your motorcycle.

NOTICE

Using the wrong air cleaner element may cause premature engine wear or performance problems.

1. Remove the front seat. ➤ P. 62
2. Remove the battery. ➤ P. 60
3. Remove the junction connector by removing screw A.
4. Remove the air cleaner case cover/element by removing screws A.
5. Remove the air cleaner element by removing screws B.
6. Install the new air cleaner element.
▶ Make sure the air cleaner element is installed securely.
7. Install the parts in the reverse order of removal.

