

## ■ Rear Wheel

### Removal

1. Place your motorcycle on a firm, level surface.
2. Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.
3. Loosen the rear axle nut, lock nuts and turn the adjusting nuts so the rear wheel can be moved all the way forward for maximum drive chain slack.
4. Remove the drive chain from the driven sprocket by pushing the rear wheel forward.
5. Remove the rear axle nut and washer.

