

Engine

Number.....	115
Oil.....	52, 65
Oil Filter.....	67
Overheats.....	91
Starting.....	35
Stop Switch.....	32, 35, 109
Stopping.....	109
Will Not Start.....	90

Environment	114
--------------------------	-----

Equipment

Owner's Manual.....	39, 109
Tool Kit.....	39

F

Flooded Engine	35
-----------------------------	----

Front Seat	62
-------------------------	----

Front Suspension	87
-------------------------------	----

Fuel

Consumption Meter.....	20
Gauge.....	19
Mileage Meter.....	20
Oxygenated.....	122
Recommended.....	37

Remaining.....	19
Tank Capacity.....	37

Fuses	51, 105
--------------------	---------

G

Gasohol	122
----------------------	-----

Gasoline	37
-----------------------	----

H

Hazard Switch	32
----------------------------	----

Headlight Aim	85
----------------------------	----

Headlight Dimmer Switch	32
--------------------------------------	----

Helmet Holder	38
----------------------------	----

High Beam Indicator	31
----------------------------------	----

High Coolant Temperature Indicator ...	30, 91
---	--------

Honda Contacts	126
-----------------------------	-----

Horn Button	32
--------------------------	----

I**Ignition Cut-off System**

Banking Sensor.....	109
Side Stand.....	75

Ignition Key	108
---------------------------	-----

Ignition Switch	33, 35, 109
------------------------------	-------------