











Items		Frequency* <sup>1</sup>							Refer to page		
		× 1,000 mi	0.6	4	8	12	16	20		24	
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0		38.4	
Emission-related Items	Fuel Line					I		I		I	-
	Throttle Operation					I		I		I	81
	Air Cleaner* <sup>2</sup>						R			R	67
	Crankcase Breather* <sup>3</sup>				C	C	C	C	C	C	82
	Spark Plug							R			-
	Valve Clearance							I			-
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R							63	
	Engine Oil Filter			R		R		R		R	65
	Engine Idle Speed			I		I		I		I	-
	Radiator Coolant* <sup>5</sup>					I		I		R	68
	Cooling System					I		I		I	-
	Secondary Air Supply System					I		I		I	-
Evaporative Emission Control System* <sup>4</sup>						I			I	-	

### Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (➔ P. 124).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

### Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R** : Replace
- L** : Lubricate
- C** : Clean