


## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” [▶ P. 50](#)

### Fuse Box Fuses

1. Remove the seat. [▶ P. 61](#)
2. Remove the fuse box covers.
3. Pull the fuses out one by one with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Reinstall the fuse box covers.
5. Reinstall the seat.

CB500X

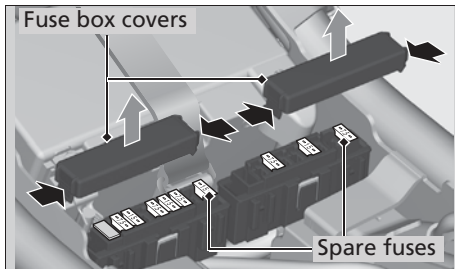

CB500XA

