


# Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

## Low oil pressure indicator

Comes on when the ignition switch is turned on.

Goes off when the engine starts.

**If it comes on while engine is running:**  P. 91




## ABS (Anti-lock Brake System) indicator

CB500XA only

Comes on when the ignition switch is turned on.

Goes off when your speed reaches approximately 6 mph (10 km/h).

**If it comes on while riding:**  P. 92

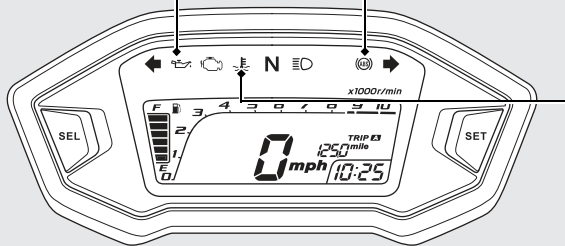

## High coolant temperature indicator

Comes on briefly when the ignition switch is turned on.

**If it comes on while riding:**

 P. 90